



OPERATING MANUAL

# SESAM 800

L15, M6, S6, S3, K3, RXD, RX, RX DIN



## Table of Contents

<b>1</b>	<b>Introduction</b>	<b>4</b>
<b>2</b>	<b>Scope</b>	<b>4</b>
<b>3</b>	<b>Service</b>	<b>4</b>
<b>4</b>	<b>Maintenance</b>	<b>4</b>
<b>5</b>	<b>Technical Specifications</b>	<b>5</b>
<b>6</b>	<b>Description of the System</b>	<b>7</b>
6.1	<i>Receivers</i>	7
6.2	<i>Transmitters</i>	8
<b>7</b>	<b>Description of the Receivers</b>	<b>9</b>
<b>8</b>	<b>Installation of the Receiver</b>	<b>12</b>
8.1	<i>Placement of the Receiver</i>	12
8.2	<i>Antenna Placement</i>	13
8.3	<i>Connections on the Receiver (All Models)</i>	13
<b>9</b>	<b>Indicators on the Receivers</b>	<b>14</b>
9.1	<i>Sesam 800 RX</i>	14
9.2	<i>Sesam 800 RXD Model</i>	15
9.3	<i>Sesam 800 RX DIN</i>	15
<b>10</b>	<b>Configuration of the Receiver</b>	<b>16</b>
10.1	<i>Sesam 800 RX Model</i>	16
10.1.1	<i>Basic Configuration</i>	16
10.1.2	<i>Advanced Configuration</i>	17
10.1.3	<i>Erasing All Transmitters in the Receiver</i>	17
10.2	<i>Sesam 800 RXD Model</i>	18
10.2.1	<i>Basic Configuration</i>	18
10.2.2	<i>Advanced Configuration</i>	18
10.2.3	<i>Erasing Transmitters in the Receiver SESAM 800 RXD</i>	20

10.2.4 Re- configuring a Transmitter in the Receiver	20
10.2.5 PIN Lock in the Receiver	21
10.3 Sesam 800 RX DIN	23
10.3.1 Basic Configuration	23
10.3.2 Advanced Configuration	23
10.3.3 Erasing All Transmitters in the Receiver SESAM 800 RX DIN	24
10.4 High Security Transmission Mode for RX and RXD	24
10.5 Memory Card (Only RXD)	25
10.5.1 Copying Information from a Memory Card to a New Receiver	25
10.5.2 Copying Information from a Receiver to a Memory Card	26
<b>11 Description of the Transmitters</b>	<b>27</b>
11.1 Indicators on the Transmitter	27
<b>12 Replacing Batteries in the Transmitters</b>	<b>29</b>
12.1 Replacing Batteries in Sesam K3	29
12.2 Replacing Batteries in the Sesam 800 S3 & S6	30
12.3 Replacing Batteries in Sesam 800 M6	31
12.4 Replacing Batteries in the Sesam 800 L15	32
<b>13 Error Codes</b>	<b>33</b>
13.1 Error Codes, Sesam 800 RXD	33
13.2 Error Codes, Sesam 800 RX and RX DIN	33
<b>14 Receiver Drill Measure for RX and RXD</b>	<b>34</b>
14.1 Measure for RX DIN	35

# 1 Introduction

This manual only covers the installation of the Sesam radio remote door opening system. The Sesam System is not a complete door opening system: it provides only the set of outputs that are driven according to the actions performed by the operator of the transmitter. The way the set of outputs is used for controlling the doors depends on the specific installation and is outside the scope of the Sesam.

The complete remote control system, where the controlled object is one part, has to be tested and approved according to the standards/norms that are applicable and specific to the controlled object. This is not the responsibility of Åkerströms Björbo.

# 2 Scope

The following guide must be used when installing Åkerströms Sesam door opening system to ensure secure, safe operation. The installation must be carried out by a certified electrician.

# 3 Service

Contact your Åkerströms Björbo AB dealer for service or support. Warranty work must be performed by Åkerströms or authorized service center.

# 4 Maintenance

For cleaning use a dry cleaning cloth, if necessary use a wet cleaning cloth and a soap solution. Never use an alcohol-based product for cleaning; it can seriously damage the plastic. Do not use pressure washer on the product!

## 5 Technical Specifications

Tabell 1. Technical Specifications, Sesam 800

<b>System Specifications</b>	
Operating frequency:	869,8 MHz
Channel separation:	25 kHz
Power output:	< 5 mW
Functional sensitivity:	$\leq -107$ dBm BER $10^{-4}$
Transmission principle:	GMSK, TDMA
Operating Temperature:	-25°C - +55°C
Storage Temperature:	-40°C - +85°C
<b>Specifications RX/RXD</b>	
IP- class:	IP65
Power Supply, 12-24 V DC versions:	12-24 V AC/DC 150 mA (SELV), max 4A fuse
Power Supply, 230 V AC versions:	230 V AC 50 Hz 15 mA, max 4A fuse
Max switching capacity of relays:	2A/250 V AC with $\cos\phi=1$
Total load on all relays:	4A/250 V AC (not exceeding 2A on any single relay)
Relay- type	SPDT
Fuse on current loop:	2,5AT/250 V AC (IEC 60127-2/V)
Dimensions:	135 x120 x 50 mm
Weight:	450g
Screw size	TX20
<b>Specifications DIN</b>	
Power Supply	12-24 V AC/DC
Max switching capacity of relays:	2A/250 V AC with $\cos\phi=1$
Fuse on current loop:	2,5AT/250 V AC (IEC 60127-2/V)
Dimensions:	92 x72,5 x 30 mm
Weight:	84g

### Specifications K3

IP- class:	IP65
Dimensions:	67x44x13 mm
Weight:	30g
Battery type:	2* CR 2025 Lithium cells
Screw Size	PH00

### Specifications S3

IP- class:	IP67
Dimensions:	75 x 46 x 22 mm
Weight:	80g
Battery type:	2*AAA/LR03 Alkaline
Screw Size	PH00

### Specifications S6

IP- class:	IP67
Dimensions:	75 x 46 x 22 mm
Weight:	80g
Battery type:	2*AAA/LR03 Alkaline
Screw Size	PH00

### Specifications M6

IP- class:	IP67
Dimensions:	100 x 60 x 25 mm
Weight:	130g
Battery type:	2*AA/LR06 Alkaline
Screw Size	PH2

### Specifications L15

IP- class:	IP67
Dimensions:	120x75x30
Weight:	200g
Battery type:	2*AA/LR06 Alkaline
Screw Size	PH2

There is also a L99 with a display. For information see the Operating Manual  
 SESAM L99, 800RX and 800RXD

## 6 Description of the System

### 6.1 Receivers


This document covers three receiver models; RX, RXD and RX DIN.

RX and RXD can be ordered as 230 V AC or 12-24 V AC/DC.

RX DIN can only be ordered as 12-24 V AC/DC.


#### Sesam 800 RX:

- 3 Single Pole Double Throw relays.
- Memory capacity: up to 100 transmitters.

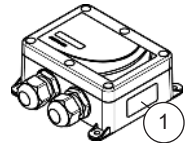


#### Sesam 800 RXD:

- 3 Single Pole Double Throw relays.
- Integrated display and configuration buttons.
- Memory capacity: up to 500 transmitters.
- The receiver can be equipped with a detachable memory card containing a backup of all configuration parameters.

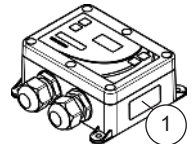

#### Sesam 800 RX DIN:

- 3 Single Pole Double Throw relays.
- Memory capacity: up to 100 transmitters.
- Designed for DIN rail




① Type label position

## 6.2 Transmitters

This document covers five transmitter models:


### Keyring K3:

- Miniature 3 button transmitter.
- Suitable for controlling 3 non-response time critical functions.




### Small S3:

- Small size 3 button transmitter.
- Suitable for controlling 3 functions.




### Small S6:

- Small size 6 button transmitter.
- Suitable for controlling 6 functions.




### Medium M6:

- Medium size 6 button transmitter.
- Suitable for controlling 6 functions and/or where a larger transmitter is preferred, for example industrial applications.

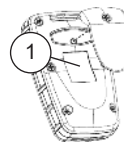

### Large L15:


- Large 15 button transmitter.
- Suitable for controlling up to 15 functions, for example industrial applications.

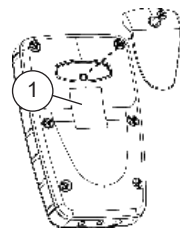

① Type label position




## 7 Description of the Receivers

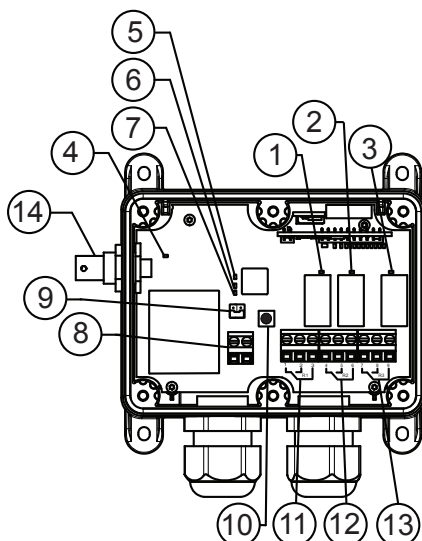

*Figure 1. Sesam 800 RX 230 V AC model indicators, connections and jumper.*

1. LED 1 Relay 1 status
2. LED 2 Relay 2 status
3. LED 3 Relay 3 status
4. LED 4 Power
5. LED 5 Squelch
6. LED 6 Status
7. LED 7 Learn
8. Power connection 230 V AC
9. Jumper J1 High Security Transmission Mode setting
10. Learn/Erase button
11. Connection to relay 1
12. Connection to relay 2
13. Connection to relay 3
14. Antenna connector

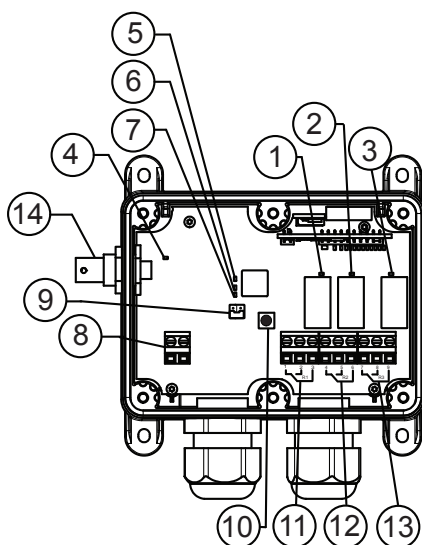

*Figure 2. Sesam 800 RX 12-24 V DC model indicators, connections and jumper.*

1. LED 1 Relay 1 status
2. LED 2 Relay 2 status
3. LED 3 Relay 3 status
4. LED 4 Power
5. LED 5 Squelch
6. LED 6 Status
7. LED 7 Learn
8. Power connection 12-24 V AC/DC
9. Jumper J1 High Security Transmission Mode setting
10. Learn/Erase button
11. Connection to relay 1
12. Connection to relay 2
13. Connection to relay 3
14. Antenna connector

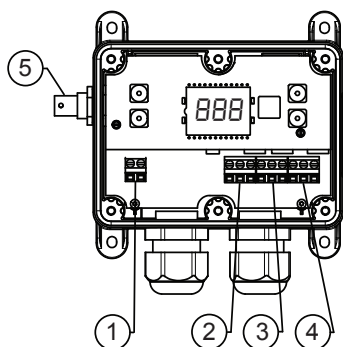


Figure 3. *Sesam 800 RXD  
12-24 V DC/AC model  
connections*

1. Power connection
2. Connection to relay 1
3. Connection to relay 2
4. Connection to relay 3
5. Antenna connector

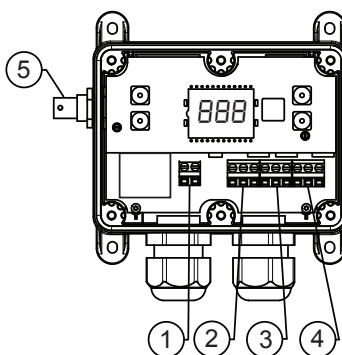


Figure 4. *Sesam 800 RXD 230 V AC model  
connections*

1. Power connection,
2. Connection to relay 1
3. Connection to relay 2
4. Connection to relay 3
5. Antenna connector

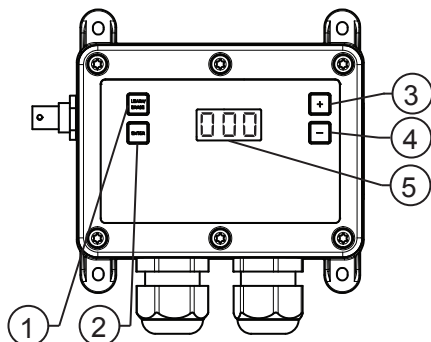


Figure 5. Sesam 800 RXD model display and buttons

1. Learn/Erase button
2. Enter button
3. Memory position up button
4. Memory position down button
5. Display

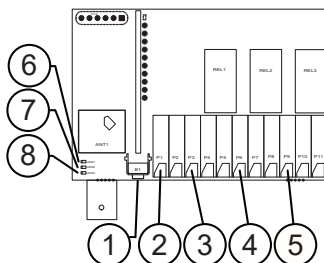


Figure 6. Sesam 800 RX DIN model connections and button

1. Learn/Erase button
2. Power connection
3. Connection to relay 1
4. Connection to relay 2
5. Connection to relay 3
6. LED 7 Learn
7. LED 6 Status
8. LED 5 Squelch

## 8 Installation of the Receiver

The permanent installation of the receiver must include fuses that protect the equipment and wiring from over current and short-circuit. In detail the power supply of the receiver and all relay contacts must be fused.


All fuses are used as disconnecting devices. The fuses shall be easily accessible, must submit a contact gap of at least 3.0 mm and have to be placed in the line pole. Note that the fuse must be compatible with IEC 60127-2/V.

After the installation of the equipment, the installed cables must be bound together in pairs (i.e. by using a cable binder) very close to the terminal blocks.

Note that there might be hazardous voltage in the receiver; therefore only certified electricians are allowed to open the lid.

### 8.1 Placement of the Receiver

Select a location that is within the environmental limitations of the receiver and where it is difficult for unauthorized persons to obtain access to the receiver. If possible, mount the receiver with the cable glands facing downwards.

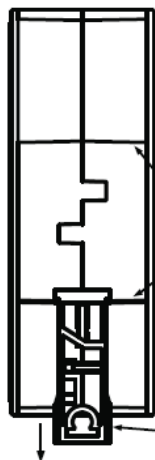

For the drilling measure of SESAM RX and RXD see chapter 14.

These receivers are preferably screwed with 4 mm screws suitable for the surface. Think of the antenna's size and influence of any metal objects when choosing placement.

SESAM RX DIN is to be mounted on a DIN rail. On the back there is a recess that the rail fits in (see 1 in Figure 7). When the recess is pressed against the rail the snap fit (see 2 in Figure 7) will lock the receiver to the rail automatically. Make sure that the snap. To remove, withdraw the snap fit and lift the receiver off the rail.

Figure 7. DIN receiver, the lock for the rail.

## 8.2 Antenna Placement

Attach the supplied antenna to the antenna connector on the receiver. Note that the antenna must not be placed near metal objects such as wiring, tin roof, etc.

If an antenna cable is needed, contact Åkerströms Björbo AB.

## 8.3 Connections on the Receiver (All Models)

The receiver is equipped with connections for relays; power and an external antenna (see Figure 1, Figure 2, Figure 3, Figure 4 and Figure 6).

The connections for power connection are, from left to right:

- Line (L)
- Neutral (N)

The connections for each relay are, from left to right:

- Common terminal
- Normally opened (NO)
- Normally closed (NC)

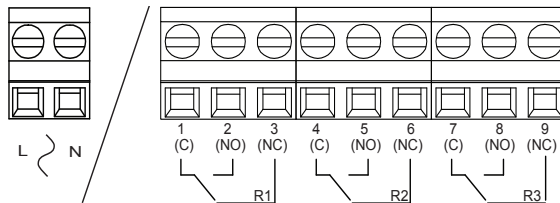


Figure 8. Power connection and Relay connection

## 9 Indicators on the Receivers

### 9.1 Sesam 800 RX

The Sesam 800 RX model has seven LED indicators that are displaying system information (see Figure 1 for positions of the LEDs).

The indications on the LEDs are as follows:

- |                        |   |
|------------------------|---|
| LED 1, Relay 1 status: | LED ON indicates that the relay is active.  |
| LED 2, Relay 2 status: | LED ON indicates that the relay is active.  |
| LED 3, Relay 3 status: | LED ON indicates that the relay is active.  |
| LED 4, Power:          | Indicates whether the receiver is powered on or not.  |
| LED 5, Squelch:        | Indicates a detected signal on the operating frequency band.                                  |
| LED 6, Status:         | Indicates that information from a transmitter associated with the receiver has been received. |
| LED 7, Learn:          | Indicates if the transmitter is in Learn Mode.  |

## 9.2 Sesam 800 RXD Model

The Sesam 800 RXD model has an integrated display that shows additional system relevant information (see Figure 5).

At activation of a certain function, the transmitter memory position will be shown in the display window.

If a relay is activated, the following will be shown in the display:

- Left decimal point: Relay 1 activated.
- Both decimal points: Relay 2 activated.
- Right decimal point: Relay 3 activated.

At start up, the display will show system information in the following order:

- System version.
- “**Crd**” if a memory card is installed.
- Number of used memory position.

## 9.3 Sesam 800 RX DIN

The Sesam 800 RX DIN model has three LED indicators that are displaying system information (see Figure 6 for positions of the LEDs).

The indications on the LEDs are as follows:

- |                 |   |
|-----------------|---|
| LED 5, Squelch: | Indicates a detected signal on the operating frequency band.                                  |
| LED 6, Status:  | Indicates that information from a transmitter associated with the receiver has been received. |
| LED 7, Learn:   | Indicates if the transmitter is in Learn Mode.  |

## 10 Configuration of the Receiver

### 10.1 Sesam 800 RX Model

#### 10.1.1 Basic Configuration

1. Open the lid on the receiver (6 TX20 screws).
2. Press the Learn/Erase button until LED 7 is ON. The Learn Mode will be active for 10 seconds (as long as LED 7 is ON).
  - a. Transmitters Keyring K3 and Small S3: Press button 1 on the transmitter if buttons 1-3 shall be used for activating the relays in the receiver.
  - b. Transmitter Small S6 and Medium M6:  
Press button 1 on the transmitter if button 1-3 shall be used for activating the relays in the receiver.  
Press button 4 on the transmitter if button 4-6 shall be used for activating the relays in the receiver.
  - c. Transmitter Large L15: Press the button on the transmitter that shall be used for activating relay 1 in the receiver.
3. LED 7 on the receiver flashes 3 times if the Learn procedure is successful.
4. Mount the lid on the receiver. Tighten the screws with TX20, torque 2.0 Nm.



### 10.1.2 Advanced Configuration

This configuration allows the user to determine which button activates a specific relay.

1. Open the lid on the receiver (6 TX20 screws).
2. Press the Learn/Erase button until LED 7 is ON. The Learn Mode will be active for 10 seconds.
  - a. Press the Learn/Erase button once in order to select relay one (the status LED will flash once).
  - b. Press the Learn/Erase button twice in order to activate relay two (the status LED will flash twice).
  - c. Press the Learn/Erase button three times in order to activate relay three (the status LED will flash three times).
3. Press the button that shall be used for activating the selected relay in the receiver. If the configuration is accepted by the receiver, LED 7 flashes 3 times.
4. Mount the lid on the receiver. Tighten the screws with TX20, torque 2,0 Nm.

### 10.1.3 Erasing All Transmitters in the Receiver

1. Open the lid on the receiver (6 TX20 screws).
2. Press the Learn/Erase button until LED 7 is ON. The Learn Mode will be active for 10 seconds.
3. Press the Learn/Erase button for 5 seconds (until LED 7 is OFF). All transmitters are now erased from the receiver memory.
4. Mount the lid on the receiver. Tighten the screws with TX20, torque 2.0 Nm.

## 10.2 Sesam 800 RXD Model

### 10.2.1 Basic Configuration

1. Press the Learn/Erase button.  
The display window shall show “**Lrn**” followed by the memory position that the transmitter will be stored in.  
The right decimal on the display flashes as long as the Learn mode is active (10 seconds).
  - a. Transmitters Keyring K3 and Small S3:  
Press button 1 on the transmitter if buttons 1-3 shall be used for activating the relays in the receiver.
  - b. Transmitter Small S6 and Medium M6:  
Press button 1 on the transmitter if button 1-3 shall be used for activating the relays in the receiver.  
Press button 4 on the transmitter if button 4-6 shall be used for activating the relays in the receiver.
  - c. Transmitter Large L15:  
Press the button on the transmitter that shall be used for activating relay 1 in the receiver.
2. The display shows “**ACC**” if the learn process is successful and the receiver will return to normal operating mode automatically.

### 10.2.2 Advanced Configuration

This configuration allows the user to choose at what memory position a certain transmitter shall be stored in and to determine which button activates a specific relay.

#### Adding a transmitter in a certain memory position

1. Press the Learn/Erase button.  
The display window shall show “**Lrn**” followed by the memory position that the transmitter will be stored in.  
The right decimal on the display flashes as long as the Learn mode is active (10 seconds)

2. To select what memory position to use (memory positions can be 1-500) press the Memory Position UP or Memory Position DOWN buttons (see Figure 5). The flashing left decimal on the display indicates whether the chosen memory position is already used.
  - a. Transmitters Keyring K3 and Small S3:  
Press button 1 on the transmitter if buttons 1-3 shall be used for activating the relays in the receiver.
  - b. Transmitter Small S6 and Medium M6:  
Press button 1 on the transmitter if button 1-3 shall be used for activating the relays in the receiver. Press button 4 on the transmitter if button 4-6 shall be used for activating the relays in the receiver.
  - c. Transmitter Large L15:  
Press the button on the transmitter that shall be used for activating relay 1 in the receiver.
3. The display will show **"ACC"** and will return to normal operating mode.

#### Changing the transmitter push button number and receiver relay relationship

1. Press the Learn/Erase button.
2. Press the Enter button to choose relay, repeated pressure switches relay.  
The display shows what relay that will be used. The format is "R=X"  
where X is the relay used.
3. Press the button on the transmitter that will activate the relay.
4. The display will show **"ACC"** and will return to normal operating mode.

### 10.2.3 Erasing Transmitters in the Receiver SESAM 800 RXD

#### Erasing individual transmitters

1. Press the Learn/Erase button.  
The display shows “**Lrn**” followed by the memory position that will be erased. This mode will be active for 10 seconds.
2. Change what memory position to delete (1 to 500) by using “+” and “-” buttons.  
The left decimal in the display window indicates whether the memory position is in use or not (note that two decimals are shown in the display).
3. Press the Learn/Erase button to remove the selected memory position.
4. The display will show “**DEL**” and return to normal operation.

#### Erasing all transmitters

1. Press the Learn/Erase button.  
The display shows “**Lrn**” followed by the memory position that will be erased. This mode will be active for 10 seconds.
2. Press and hold the Learn/Erase button for 5 seconds to erase all memory positions.
3. The display will show “**DEL**” “**ALL**” and return to normal operation.

All transmitters are now erased from the receiver memory and, if connected, the memory card.

### 10.2.4 Re- configuring a Transmitter in the Receiver

If the user attempts to program a transmitter that is already programmed in the receiver, the display will show “**Err1**” followed by the original memory position on the display.

Erase the original memory position before proceeding with the configuration.

### 10.2.5 PIN Lock in the Receiver

The Sesam 800 RXD can be protected from unauthorized configuration by using a 4-digit PIN-code.

When a PIN-code is configured, all buttons on the receiver are locked except the button used to enter the code (Enter button).

**To configure the PIN-lock do the following:**

1. Power on the receiver.
2. Press the Enter button and hold it down for 5 seconds. The display should now show **"Pin new"** followed by **"\_ \_ \_"**. If the user is inactive for more than 10 seconds in the PIN configuration mode the receiver will return to normal operations.
3. Enter the first digit of the code by using the '+' and '-' buttons. Press the 'Enter' button when finished.
4. Repeat the above step for digit 2-4.
5. When all 4 digits are entered the display will show **"rpt"** (repeat). The code must be repeated to be accepted. Enter the code once more.
6. If the code is entered successfully the display will show **"sto"** (stored).

The receiver will automatically be locked after 10 seconds of button inactivity. The display will show **"LOC"** when the receiver switches to locked mode.

**To unlock the receiver do the following:**

1. Press the Enter button and hold it down for 5 seconds. The display should now show **"Pin"** followed by **"\_ \_ \_"**. If the user is inactive for more than 10 seconds in the PIN configuration mode the receiver will return to normal operations.
2. Enter the first digit of the code by using the '+' and '-' buttons. Press the 'Enter' button when finished.
3. Repeat the above step for digit 2-4.
4. When all 4 digits are entered correctly the display will show **"PAS"** (passed) and the buttons on the receiver will be unlocked for 60 seconds. If the PIN is incorrect the display will show **"Err"**.

The receiver will automatically be locked after 60 seconds of button inactivity. The receiver can also be manually locked by pressing the Enter button for 5 seconds. The display will show **"LOC"** when the receiver switches to locked mode.

**To change /delete Receiver PIN do the following:**

The PIN can only be changed by unlocking the receiver and making a "delete all" erasing all configurations on the receiver.

**MC Manager Compatibility:**

In the new version of the MC Manager PC application version 1.1 there is an additional field for PIN code. This allows the user to pre-configure receiver PIN.

If a memory card is pre-configured with a PIN that is identical to the PIN in the receiver an automatic copy will be done from the memory card to the receiver at start-up.

A lost receiver PIN-code can be retrieved with the MC manager.

## 10.3 Sesam 800 RX DIN

### 10.3.1 Basic Configuration

1. Press the Learn/Erase button until LED 7 is ON. The Learn Mode will be active for 10 seconds (as long as LED 7 is ON).
  - a. Transmitters Keyring K3 and Small S3: Press button 1 on the transmitter if buttons 1-3 shall be used for activating the relays in the receiver.
  - b. Transmitter Small S6 and Medium M6:  
Press button 1 on the transmitter if button 1-3 shall be used for activating the relays in the receiver.  
Press button 4 on the transmitter if button 4-6 shall be used for activating the relays in the receiver.
  - c. Transmitter Large L15: Press the button on the transmitter that shall be used for activating relay 1 in the receiver.
2. LED 7 on the receiver flashes 3 times if the Learn procedure is successful.

### 10.3.2 Advanced Configuration

This configuration allows the user to determine which button activates a specific relay.

1. Press the Learn/Erase button until LED 7 is ON. The Learn Mode will be active for 10 seconds.
  - a. Press the Learn/Erase button once in order to select relay one (the status LED will flash once).
  - b. Press the Learn/Erase button twice in order to activate relay two (the status LED will flash twice).
  - c. Press the Learn/Erase button three times in order to activate relay three (the status LED will flash three times).
2. Press the button that shall be used for activating the selected relay in the receiver. If the configuration is accepted by the receiver, LED 7 flashes 3 times.

### 10.3.3 Erasing All Transmitters in the Receiver SESAM 800 RX DIN

1. Press the Learn/Erase button until LED 7 is ON. The Learn Mode will be active for 10 seconds.
2. Press the Learn/Erase button for 5 seconds (until LED 7 is OFF). All transmitters are now erased from the receiver memory.

## 10.4 High Security Transmission Mode for RX and RXD

The High Security Transmission Mode uses encrypted authentication to ensure that the receiver only replies to commands from transmitters stored in the memory. This mode makes it difficult to scan and record messages that could, with the right technology, open doors without using an authentic coded transmitter.

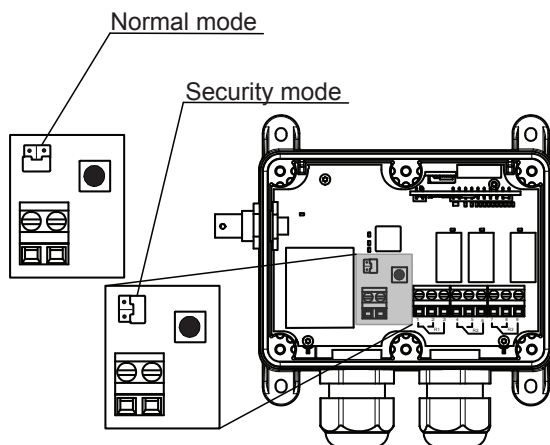


Figure 9. Jumper J1 shown with high security transmission mode enabled.

To enable the High Security Transmission Mode, close jumper J1 (see Figure 9) and restart the receiver. At startup, the display will show “**S E C**”.

The high security mode will slightly increase the response time and reduce the operating range.



## 10.5 Memory Card (Only RXD)

In applications where many transmitters are used to control one single receiver the receiver can be equipped with a detachable memory card containing a backup of all configuration parameters.

If a receiver needs replacement, the user only has to install a new receiver of the same type and insert the memory card in the new receiver in order to get the same functionality as in the old receiver.

If more receivers with the same configuration are needed, remove the card and perform the copy operation on a new receiver.

### 10.5.1 Copying Information from a Memory Card to a New Receiver

1. Power off the receiver.
2. Unscrew the 6 screws holding the receiver lid.
3. Carefully remove the display card.
4. Insert the memory card that you want to copy in the memory card slot in the receiver (see Figure 10).
5. Mount the display card in the display card slot (see Figure 10).
6. Start the receiver.

The display will show **“CPY”** when the copy operation is completed.

Note that the memory in the receiver has to be empty before copying the memory card to the receiver (see chap. 10.2 for information on how to delete the memory).

7. If the memory card will be used to copy the configuration on to other receivers or if the memory card shall be used as a backup, remove it. If not, mount the lid and tighten all screws with TX20, torque 2.0 Nm.

### 10.5.2 Copying Information from a Receiver to a Memory Card

Note that the memory card has to be empty before copying the receiver memory to the card. To remove information from a memory card, insert the card in a new receiver and erase all transmitters (see section 10.2).

1. Power off the receiver.
2. Unscrew the 6 screws holding the receiver lid and remove the lid.
3. Carefully remove the display card.
4. Insert the memory card that you want to copy all parameters to in the memory card slot (see Figure 10).
5. Mount the display card in the display card slot (see Figure 10).
6. Start the receiver and wait for approx. 5 seconds.

The display will show “**CPY**” “**to**” “**CRD**” when the copy operation is completed.

7. Remove the display card and the memory card. If the memory card shall be stored; store it in a clean environment free from static electricity.
8. Mount the display card and the lid. Tighten all screws with TX20, torque 2.0 Nm.

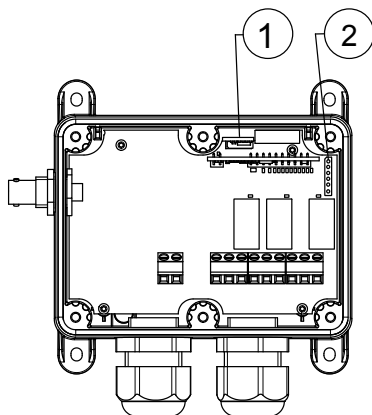


Figure 10. Memory card and display slots in the receiver

1. Memory card slot
2. Display slot

## 11 Description of the Transmitters

### 11.1 Indicators on the Transmitter

#### Normal operation

Quick flashing RED = sending message.

Continuous GREEN = Relay activated in the receiver (Feedback information from receiver).

#### Fault indications

3 long RED flashes = Battery depleted, transmitter can not send commands.

Continuous RED after activating command = Low battery.

Very quick flashing RED = Hardware error.

#### After battery insertion:

Yellow LED ON for 1 second followed by one GREEN flash.

#### The Sesam 800 K3 3 button keyring transmitter

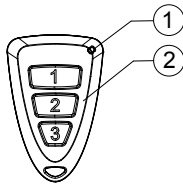


Figure 11. The Sesam 800 K3 transmitter indicators and buttons

- 1. Status LED
- 2. Buttons 1-3

#### The Sesam 800 S3 3 button transmitter

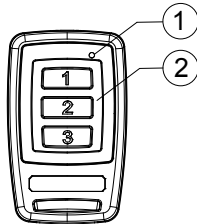
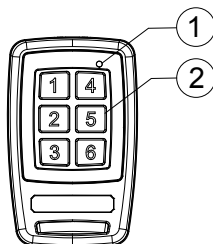



Figure 12. The Sesam 800 S3 transmitter indicators and buttons

- 1. Status LED
- 2. Buttons 1-3

**The Sesam 800 S6 6 button transmitter**


*Figure 13. The Sesam 800 S6 transmitter indicators and buttons.*

- 1. Status LED
- 2. Buttons 1-6

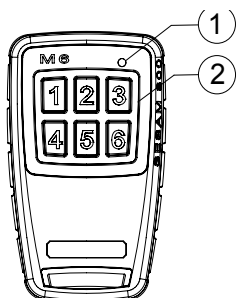**The Sesam 800 M6 6 button transmitter**

*Figure 14. The Sesam 800 M6 transmitter indicators and buttons.*

- 1. Status LED
- 2. Buttons 1-6

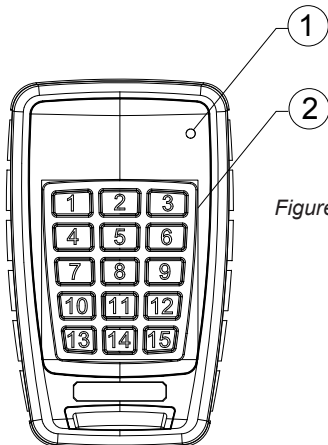**The Sesam 800 L15 15 button transmitter**

*Figure 15. The Sesam 800 L15 transmitter indicators and buttons.*


- 1. Status LED.
- 2. Buttons 1-15

## 12 Replacing Batteries in the Transmitters

### 12.1 Replacing Batteries in Sesam K3

If the Status LED on the transmitter indicates low battery, replace the batteries promptly. Before changing the batteries note that changing of batteries must take place in a clean environment free from static electricity.

The batteries are changed as follows:

1. Unscrew the 3 screws holding the enclosure together (①) with screwdriver PH00.
2. Carefully remove the back enclosure.
3. Remove the plastic holder and the batteries (②).
4. Insert the new batteries (③ and  ②). Make sure the batteries are inserted in the correct polarity.
5. Close the enclosure
6. Tighten the 3 screws with torque 0.14 Nm.

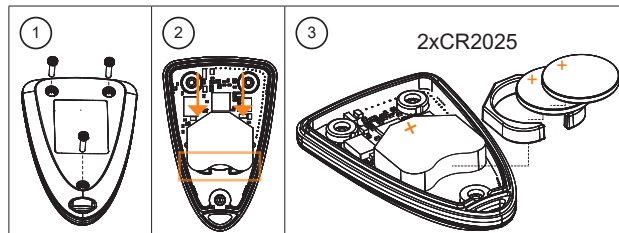


Figure 16. Battery location in SESAM 800 K3

## 12.2 Replacing Batteries in the Sesam 800 S3 & S6

If the Status LED on the transmitter indicates low battery, replace the batteries promptly. Before changing the batteries note that changing of batteries must take place in a clean environment free from static electricity.

The batteries are changed as follows:

1. Open the battery cover by unscrewing the six screws on the backside of the transmitter enclosure with screwdriver PH00.
2. Carefully remove the cover by lifting up the front of the cover.
3. Remove the used batteries.
4. Insert the new batteries. Make sure the batteries are inserted in the correct polarity.
5. Close the cover by first inserting the backside of the cover in the transmitter, and then press the front down.
6. Tighten the six screws with torque 0.14 Nm.

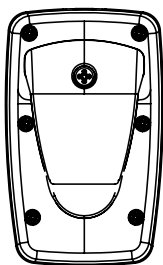


Figure 17.  
Battery cover and  
the screws holding  
the cover

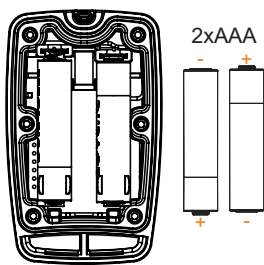


Figure 18. Batteries in the  
transmitter

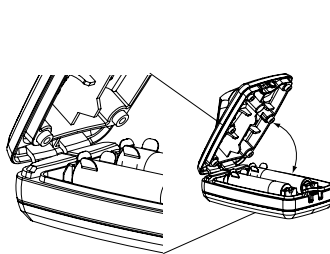



Figure 19. Back side of the  
cover inserted in its  
position

## 12.3 Replacing Batteries in Sesam 800 M6


If the status indicator on the transmitter indicates low battery, replace the batteries promptly. Before changing the batteries note that changing of batteries must take place in a clean environment free from static electricity.

The batteries are changed as follows:


1. Open the battery cover by unscrewing the 6 screws on the backside of the transmitter cover with screwdriver PH2.
2. Carefully remove the cover by lifting up the front of the cover.
3. Remove the used batteries
4. Insert new batteries. Make sure the batteries are inserted in the correct polarity.
5. Close the cover by first inserting the backside of the cover in the transmitter, and then pushing the front down.
6. Tighten the 6 screws with torque 1.0 Nm.

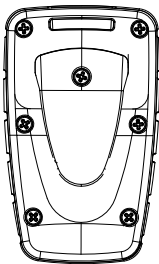

*Figure 20.*  
*Battery cover and  
the screws holding  
the cover*

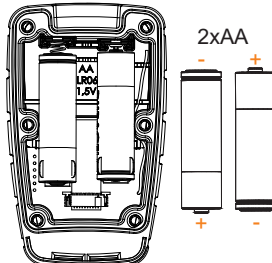

*Figure 21.* *Batteries  
inserted in the  
transmitter.*

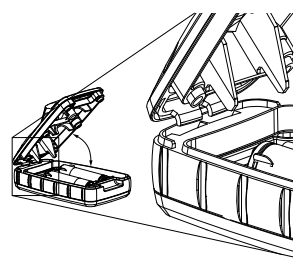

*Figure 22.* *Backside of the  
cover inserted in its  
position*

## 12.4 Replacing Batteries in the Sesam 800 L15

If the Status LED on the transmitter indicates low battery, replace the batteries promptly. Before changing the batteries note that changing of batteries must take place in a clean environment free from static electricity.

The batteries are changed as follows:

1. Open the battery cover by unscrewing the 6 screws on the backside of the transmitter housing with screwdriver PH2.
2. Carefully remove the cover by lifting up the front of the cover.
3. Remove the batteries.
4. Insert the new batteries. Make sure the batteries are inserted in the correct polarity.
5. Close the cover by first inserting the backside of the cover in the transmitter, and then press the front down.
6. Tighten the 6 screws with torque 1 Nm.

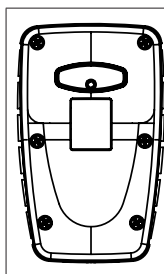


Figure 23.  
Battery cover  
and the screws  
holding the  
cover

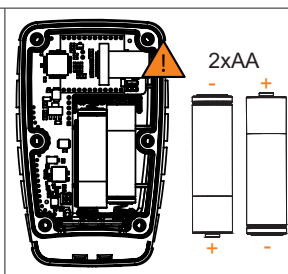


Figure 24.  
Batteries in the transmitter


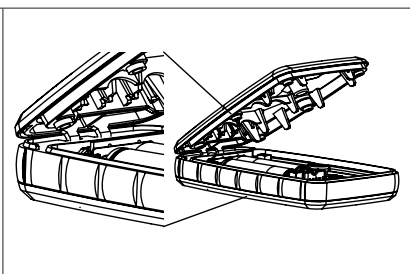


Figure 25.  
Back side of the cover  
inserted in its  
position



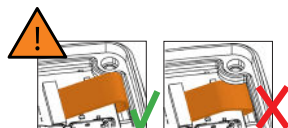

# 13 Error Codes

The Sesam 800 receivers can display a number of error codes. The error codes depend on the model of the receiver.

## 13.1 Error Codes, Sesam 800 RXD

Tabell 2. Error codes Sesam 800 RXD

Id already programmed.	1
Memory full.	2
Memory card mismatch during power- up.	10
Memory card write error. Possible memory card removal during operation.	11
Memory card copy to verify error.	12
Internal errors. The unit needs service.	3, 5 30, 31 and 32
Line power unstable.	4

## 13.2 Error Codes, Sesam 800 RX and RX DIN

Any of the above error states is displayed with ten quick flashes on the Status LED (LED 6) regardless of fault.

# 14 Receiver Drill Measure for RX and RXD

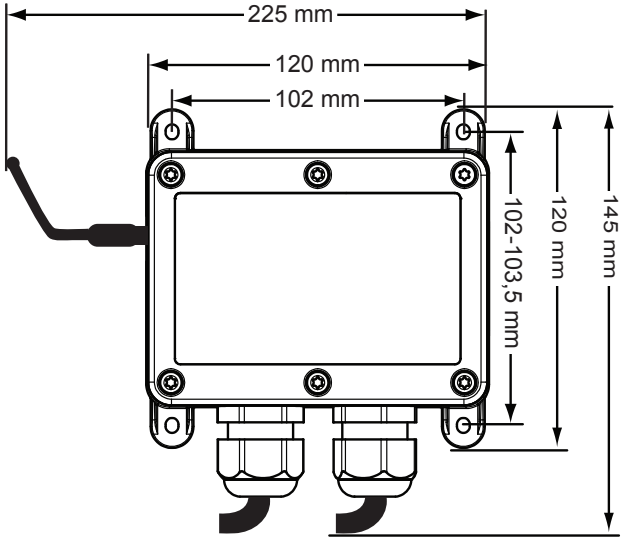


Figure 26. Receiver Drill Measure for RX and RXD

The receiver shall be attached with 4 mm screws that are suitable for the surrounding environment

## 14.1 Measure for RX DIN

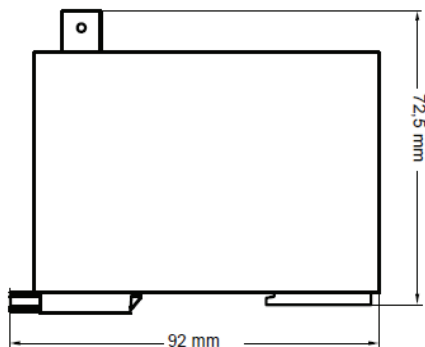


Figure 27. The DIN receiver measure



Åkerströms Björbo AB | Box 7, Björbovägen 143 | SE-786 97 Björbo, Sweden  
Phone +46 241 250 00 | [frontoffice@akerstroms.se](mailto:frontoffice@akerstroms.se) | [www.akerstroms.se](http://www.akerstroms.se)